


# HOW TO FIX A NEW SPRING ON TO A DISKLOK.

1

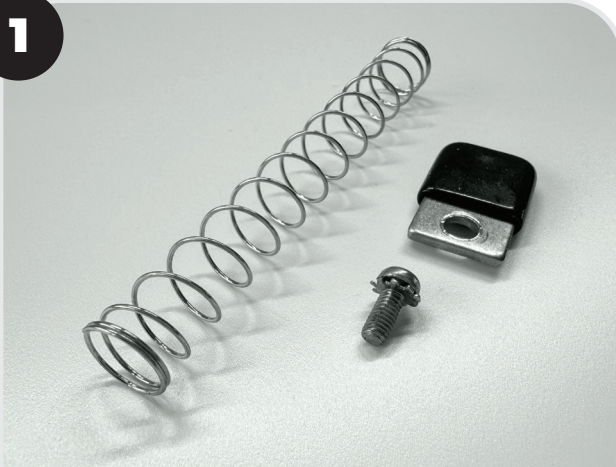

Remove the black plastic cover from the end of the Disklok arm. Ensure you have all 3 components at hand (Spring, Tab & Screw).

2



Insert something rigid in the first hole on underside of the Disklok arm, as illustrated in the photo. This will sit behind the spring mechanism in order to stabilise it when you come to tighten the screw at the next stage.

3



Place the spring over the metal rod. Hold the tab on the end of the metal rod. Tighten the small screw into the end of the rod as tightly as possible (this is where inserting something rigid in the hole at the previous stage helps).

4



Finally, replace the black plastic cover over the end of the Disklok arm from step 1.

## NOTE

Please monitor the spring arm over time, if the black tab become loose due to usage, please re tighten the screw from step 3. Also, please note you are able apply some superglue or Loctite to the thread when screwing the screw back in from step 3.

**PLEASE CONTACT US IF YOU HAVE ANY QUESTIONS.**

**EMAIL:** [AFTERSALES@DISKLOKUK.CO.UK](mailto:AFTERSALES@DISKLOKUK.CO.UK)



SCAN THE  
**QR CODE**  
TO WATCH  
THE VIDEO